

KE40 / 50 / 60 / 70 / 80 / 100 / 120




用户手册

鹰克斯®手持式激光测距仪

INKERSI

INKERSI

Laser Distance Meter User Manual

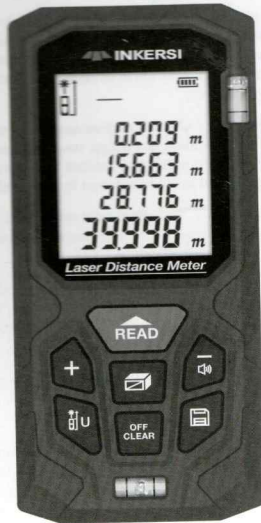

KE40 / 50 / 60 / 70 / 80 / 100 / 120



Safety Regulations

Please read the safety regulations and operation guide carefully before operating.

- ⚠ Please read all of the operational guide and safety regulations in this manual before operation. Improper operations without complying with this manual may cause damage to the device, influence on measurement result or cause personal injury to the user or a third party.
- ⚠ The instrument is not allowed to disassemble or repair in any ways. It is forbidden to do any illegal modification or performance change for the laser emitter. Please keep it out of reach of children and avoid being used by any irrelevant person.
- ⚠ It is strictly prohibited to shoot eyes or other parts of body with the laser. It is not allowed to take the laser to shoot the surface of any highly reflective objects.
- ⚠ Due to electromagnetic radiation interference to other equipment and devices, please don't use the meter in the plane or around medical equipment, don't use it in inflammable, explosive environment.
- ⚠ Discarded batteries or meter device should not be processed just like household garbage, please handle them in line with related law and regulations.
- ⚠ Any quality issues or any questions on the meter, please contact local distributors or manufacturer in time, we are ready to offer solutions for you.


Display / Button

● Display

- Power Supply
- Record
- Length, Area, Volume and Pythagorean
- Laser on
- Maximum Value
- Auxiliary Display
- Minimum Value
- Major Display


● Button

- Turn on/Measuring
- Subtraction/Sound
- Addition
- Area/Volume/Pythagorean Mode
- Reference Point/Unit Switch
- Turn off/Remove
- Save

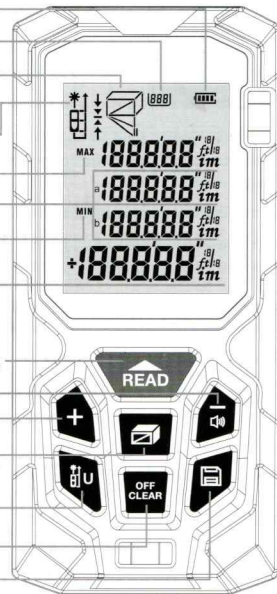

Batteries Installation

● Battery Installation and Replacement

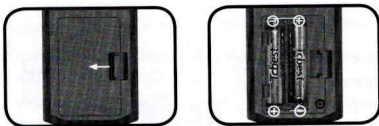

- Open the battery door on the back of device, and place batteries according to correct polarity, then close the battery door.
- 1.5 V AAA battery is applied to the meter.
- If not used for a long time, please take out the batteries to avoid battery corrosion to meter body.

Start the Instrument / Menu Setting

● Turn On/Off the Instrument

Under off state, press **READ**, device and laser get started simultaneously and the device enters the measurement mode.

Under on state, long press **OFF/CLEAR** for 3 seconds to turn the device off. The device can also be shut off without any operation within 150 seconds.

● Unit Setting

Long press **UNIT**, reset current measurement unit, the default unit is: 0.000m. There are 6 units for selection.

Measurement units:

	Length	Area	Volume
1	0.000m	0.000 m ²	0.000 m ³
2	0.00m	0.00 m ²	0.00 m ³
3	0.0 in	0.00 ft ²	0.00 ft ³
4	0 1/16 in	0.00 ft ²	0.00 ft ³
5	0'00" 1/16	0.00 ft ²	0.00 ft ³
6	0.00 ft	0.00 ft ²	0.00 ft ³

● Changing Reference Point

Short press **UNIT** to change the reference point.
The default reference point is the terminal baseline.

● Backlight on/off






The backlight is set to turn on and off automatically. The backlight will be on for 15 seconds if any key is pressed. The backlight will automatically turn off if there is no operation within 15 seconds to save power.


● Keys Sound

Long press **ON/OFF** to turn on or off the sound.


Self-Calibration


Self-calibration function is provided to ensure the precision of the device.

First, make sure the device is power off, long press  then press  to start the device. Next, loose  when "CAL" and a twinkling figure show at the display. Then the device enters self-calibration mode. At this time, the user can adjust the figure by  and  according to the error of the instrument.

The adjustment range is -9~9mm. Finally, long press  to save the setting.



For example, the actual distance is 3.780m.

If the measured value is 3.778m, 2mm smaller than the actual value, the calibration value can be adjusted up by 2mm on the existing basis with  through the calibration function.


If the measured value is 3.783m, 3mm larger than the actual value, the calibration value can be lowered by 3mm on the existing basis with  through the calibration function.



After the adjustment, press  to save the calibration result .

Single Measurement



Under the test mode, press , and the instrument emits laser to lock the measuring point. Press  again for single distance measurement, and the measurement result will be displayed in the major display area.


Continuous Measurement


Under the test mode, long press  to enter the continuous measurement mode, and the maximum and minimum measured values measured in the continuous measurement process will display in the auxiliary display area.

The current measurement value will display in the main display area. Short press  or  to exit the continuous measurement mode.

Area Measurement

Press ,  shows at the screen. One of the side of rectangle blinks at the display, please follow the below instructions for area measurement:

Press  once for length


Press  again for width

The device automatically calculates the area and shows the result in the major display area. The measuring results of the length and width of the rectangle will be showed in the auxiliary display area.

Press **OFF/CLEAR**, clear off the result and measure again if necessary.

Press **OFF/CLEAR** again to exit the mode.

Volume Measurement

Press **READ** twice to enter volume measurement mode. A  will show at the top of the screen. Please follow the below instruction for volume measurement:

Press **READ** for length

Press **READ** again for width


Press **READ** thirdly for height

The device automatically calculates the volume and shows the result in the major display area. The measuring results of the length, width and height of the cube will be showed in the auxiliary display area.

Press **OFF/CLEAR**, clear off the result and measure again if necessary.


Press **OFF/CLEAR** again to exit the mode.

Pythagoras

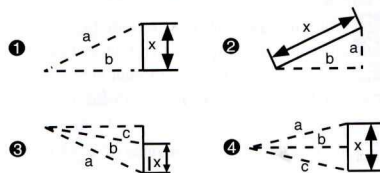

There are four Pythagoras modes which is convenient for indirect measurement in a specific complex environment.

1. Calculate the second leg by measuring the hypotenuse and another leg.


Short press **READ** three times to enter Pythagoras mode, the hypotenuse of  blinking.

Press **READ**, measure the length of hypotenuse (a)

Press **READ**, measure the length of one leg (b)

Device automatically calculates the length of another leg (x)

2. Calculate the hypotenuse by measuring the length of two legs.

Short press **READ** four times, when one leg of  is blinking.

Press **READ**, measure the length of one leg (a)

Press **READ**, measure the length of another leg (b)

Device automatically calculates the length of hypotenuse (x)

3. Press five times till the one side of blinking on the screen.

Press , measure the length of one side (a)

Press , measure the length of the median line (b)

Press , measure the length of another side (c)

Device calculates the length of the leg in full line (x)

4. Press six times till the hypotenuse of blinking on the screen.

Press , measure the length of one hypotenuse (a)

Press , measure the length of one leg (b)

Press , measure the length of another hypotenuse(c)

Device calculates the length of the leg in full line (x)

Legs must be shorter than hypotenuse, or there will be "err" showed at screen. In order to guarantee the accuracy, please make sure all measurements are started from the same point and in the order of hypotenuse and legs.

Addition / Subtraction


The device can be used for the addition and subtraction of single measurement distance. After obtaining the result of a single measurement, enter the selection of addition/subtraction function through and .

Short press , when "+" shows in the major display area, the device enters addition mode. The screen displays the sum of the last measured value and the current measured value.

Short press , when "-" shows in the major display area, the device enters subtraction mode. The screen displays the difference between the last measured value and the current measured value.

Not only length can be calculated by addition and subtraction, but also area and volume. Take area as an example:

Measure the first area and the result is shown in PIC1. Then press to measure the second area and the result is shown in PIC2, and "+" will appear in the lower left corner of the screen. Finally, press to get the sum of two areas, as shown in PIC3.

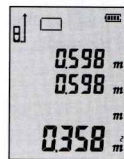

PIC1




PIC2










PIC3

Record Function

In measurement mode, when the current data is valid, long press  for 3 seconds, the current measurement data will be automatically stored in the memory.

In the indirect measurement mode of area, volume and pythagorean, the measurement data can also be stored. At this time, the device will save the complete record in the measurement mode.

● Browse / Delete the Records

Short press  to browse the stored measurement data. Use  to scroll backward for record, use  to scroll forward for record. While browsing records, short press  to delete the current records, long press  to clear all records. Short press  or  to exit the mode.

Tips

During use, the following prompts may be displayed in the major display area:

Prompt	Cause	Solution
Err	Out of the measurement range	Use the device within the measurement range.
Err1	Signal is too weak	Choose the surface with stronger reflection. Use the reflecting plate.
Err2	Signal is too strong	Choose the surface with weaker reflection.
Err3	Low battery voltage	Replace batteries.
Err4	Beyond working temperature	Use the device in the specified temperature.
Err5	Pythagoras measuring breaks the rules	Re-measure and ensure that hypotenuse is longer than legs.

Technology Specifications

ITEM	KE40/50/60/70/80/100/120
Working Range	0.05-40/50/60/70/80/100/120m
Precision	$\pm(2\text{mm}+d*1/10000)*$
Continuous Measurement	✓
Area/Volume Measurement	✓
Pythagorean Measurement	✓
Add and Subtract Measurement	✓
Area & Volume Addition/Subtraction	✓
Min/Max Value	✓
Self-Calibration	✓
Laser Level	II
Laser Type	630-670nm, <1mW
Max Storage	99 units
Automatically Cut off Laser	20s (single measurement)
Auto Power-off	150s
Battery Life	4000 / 8000 times (carbon-zinc battery / alkaline battery)
Voice Prompt	✓
Storage Temperature	-20°C~60°C
Working Temperature	0°C~40°C
Storage Humidity	20%~80%RH
Battery	2x1.5V AAA
Dimension	112x50x25mm

* "d" indicates the actual distance.

** In harsh environment, such as: sunlight is too strong, the ambient temperature fluctuates excessively, the reflection effect of the object's surface is weak, the battery is low, the measurement results will have a large error, so a reflecting plate is needed.

Instrument Maintenance

- The meter should not be stored in high temperature and humid environment for a long time. If it is not used very often, please take out the battery and place the meter in the portable bag and store it in cool and dry place.
- Please keep the device surface clean. Use a soft wet cloth to wipe the dust on the surface. Do not use corrosive liquid to clean the device. Use the same method as wiping optical devices to wipe the meter and focusing mirror.

Packing List

Please check if all accessories are complete according to the following list.

No.	Item	Unit	QTY	Note
1	Meter	PCS	1	
2	User Manual	PCS	1	
3	Gift Box	PCS	1	
4	Hand Strap	PCS	1	
5	Velvet Pouch	PCS	1	

东莞市森威电子有限公司

地址：东莞市虎门镇虎门团结路58号深达威科技园
电话：0769-85265688
邮箱：market@sndway.com

Dongguan Sndway Electronic Co.,Ltd.

Add: Sndway Science & Technology Industrial Park, 58
Tuanjie Road, Humen 523930, Dongguan, China

Tel: 0769-85265688

E-mail: market@sndway.com